


WICKER BASKETS / COUNTERTOP DISPLAYS



CORDLESS DISPLAY TURNTABLE

- Cordless
- Rotates balanced load of 5 lbs. at 2¼ RPM
- 6" support disc with neoprene non-slip pad
- Simple push off/on switch
- Non-slip feet
- Enclosed bottom
- Tough ABS base
- Runs on 2 "D" batteries* (included)
- Use in any open or enclosed showcase (dry or refrigerated)

halo

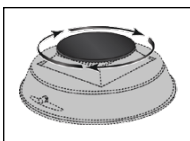

HTT126B 12" x 3¾"

COUNTERTOP DISPLAY CASE

Material: Clear Acrylic

3 TRAY CASE

- Twin-hinged rear doors
- Removable trays



APD211716 21" x 17¼" x 16½"

4 TRAY CASE

- Two self-serving front doors
- Trays remove from the rear



APD142424 14" x 24" x 24"

Tongs and tether available on page 74.

CLEAR ACRYLIC TRAY

Fits all APD cases



APDT2013 20¼" x 13¼"

WICKER DISPLAY BASKETS

Made of washable synthetic material

GREEN



BAGR18114 18" x 11½" x 4"

BLACK



BABLK14103 14" x 10" x 3"



BABLK16113 16" x 11" x 3"



BABLK18114 18" x 11½" x 4"

NATURAL



BANAT16113 16" x 11" x 3"



BANAT18114 18" x 11½" x 4"